

## APV Control Unit IECEx CU ex ia

SAFETY AGAINST EXPLOSION - FOR SPECIFIC IECEx APPLICATIONS



FORM NO.: H337864 REVISION: GB-3

READ AND UNDERSTAND THIS MANUAL PRIOR TO OPERATING OR SERVICING THIS PRODUCT.





<b>Content</b>	<b>Page</b>
<b>1. Abbreviations and Definitions</b>	<b>4</b>
<b>2. Safety Instructions</b>	<b>4</b>
2.1. Sentinels	
2.2. Intended Use	
2.3. General Regulations for Careful Handling	
2.4. Welding instructions	
2.5. Persons	
2.6. Warranty	
2.7. References for Use in Explosive Atmospheres	
2.8. Conformity	
2.9. Standards	
<b>3. General Terms</b>	<b>8</b>
3.1. Purpose of use	
3.2. Design of IECEX CU ex ia	
3.3. Control Unit Variants / Product key / Marking	
3.4. Control unit adapter	
3.5. Fitting position	
<b>4. Technical Data</b>	<b>14</b>
4.1. General terms	
4.2. Materials	
4.3. Compressed air quality	
4.4. Valve position indicator	
4.5. Solenoid valves	
<b>5. CU Assembly and Startup</b>	<b>16</b>
5.1. Pneumatic air connection	
5.2. Electrical connection	
5.3. Wiring diagrams	
5.4. Adjustment of valve position indicator	
5.5. Potential equalization	
<b>6. Accessories and Tools / Tightening torques</b>	<b>27</b>
<b>7. Disassembly</b>	<b>28</b>
7.1. General terms	
7.2. Dismantling of solenoid valve	
7.3. Dismantling of proximity switches	
<b>8. Spare Parts Lists</b>	<b>30</b>
IECEX CU ex ia	RN IECEX 01.044.7
ATEX CU adapter	RN ATEX 01.044-7

**IT IS ESSENTIAL TO READ THIS INSTRUCTION MANUAL  
BEFORE USE OF THE CONTROL UNIT!**

## 1. Abbreviations and Definitions

<b>A</b>	<b>Exhaust Air</b>
<b>AWG</b>	<b>American Wire Gauge</b>
<b>CU</b>	<b>Control Unit</b>
<b>DI</b>	<b>Digital Input</b>
<b>DO</b>	<b>Digital Output</b>
<b>EMC</b>	<b>Electromagnetic Compatibility</b>
<b>EU</b>	<b>European Union</b>
<b>GND</b>	<b>Ground/Mass Potential</b>
<b>IP</b>	<b>International Protection</b>
<b>LED</b>	<b>Luminous Diode</b>
<b>N</b>	<b>Pneumatic Air Connection NOT element</b>
<b>NEMA</b>	<b>National Electrical Manufacturers Association</b>
<b>P</b>	<b>Supply Air Connection</b>
<b>PWM</b>	<b>Pulse-Width Modulation</b>
<b>Y</b>	<b>Pneumatic Air Connection</b>

## 2. Safety Instructions

### 2.1. Sentinels

*Meaning:*



**DANGER!**

Direct danger which can lead to severe bodily harm or to death!



**CAUTION!**

Dangerous situation which can lead to bodily harm and/or material damage.



**ATTENTION!**

Risk as a result of electric current.




**NOTE!**

Important technical information or recommendation.

**These special safety instructions point directly to the respective handling instructions. They are accentuated by the corresponding symbol. Carefully read the instructions to which the sentinels refer. Continue handling the control unit only after having read these instructions.**

## 2. Safety Instructions

<b>IECEX CU ex ia</b>
 <b>II 2G</b>
<b>Ex ia IIC T4 Gb</b>

### 2.2. Intended Use

The IECEX CU ex ia control unit is only intended for use as described in chapter 3.1. Any use exceeding the margins and specifications set forth, is considered to be not intended and SPX Flow Technology shall not be liable for damage resulting therefrom. The operator is solely responsible for the risk. Prerequisites for proper and safe operation of the control unit are proper transport and storage as well as professional assembly. Intended use also means compliance with the operating, service and maintenance conditions.

### 2.3. General Regulations for Careful Handling

Please observe the information of this instruction manual as well as the operating conditions and permissible data specified in the datasheets of the control unit for process valves to ensure proper functioning and long service life of the unit.



- The operator is committed to operating the control unit in faultless condition, only.
- Observe the general technical rules while using and operating the unit!
- Observe the relevant accident prevention regulations, the national rules of the user country as well as your company-internal operating and safety regulations during operation and maintenance of the unit!
- Switch off the electrical power supply before carrying out any work on the system!
- Note that piping or valves that are under pressure must not be removed from a system!
- Take suitable measures to prevent unintentional operation or impermissible impairment
- Following an interruption of the electrical or pneumatic supply, ensure a defined and controlled re-start of the process!
- If these instructions are not observed, we will not accept any liability. Warranties on units, devices and accessories will expire!

---

## 2. Safety Instructions

---



### 2.4. Welding instructions

It is generally recommended to avoid welding work in process installation in which control units are installed and connected. If welding is nonetheless required, earthing of the electrical devices in the welding area is an absolute necessity.



### 2.5. Persons

- Installation and maintenance work may only be carried out by qualified personnel and by means of appropriate tools.
- Qualified personnel must get a special training with regard to possible risks and must know and observe the safety instructions indicated in the instruction manual.
- Work at the electrical installation may only be carried out by personnel specialised in electrics!

### 2.6. Warranty

This document does not contain any warranty acceptance. We refer to our general terms of sale and delivery. Prerequisite for a guarantee is the correct use of the unit in compliance with the specified conditions of application.

#### Attention!

This warranty only applies to the control unit. Liability will not be accepted for consequential damage of any kind that could arise from the failure or malfunction of the device.

## 2. Safety Instructions

### 2.7. References for Use in Explosive Atmospheres

In explosive atmospheres, the IECEx CU ex ia control unit must be operated with closed cover, only. Intervention with open cover must not be undertaken in humid or aggressive atmosphere. Take appropriate measures to prevent unintentional damage to boards, screw terminals as well as cable insulation and intrinsically safe components. Limit the opening period of the cover to an absolute minimum.



Take suitable measures to prevent electrostatic charge of plastic cover parts.

The connection of components - the electrical data of which are outside of the range of the ascertained intrinsically safe operation and outside of the range of the technical data - to the in- and outputs of the boards is prohibited.

Observe the respective national regulations, i.e. German VDE 0165, for the installation and operation in explosive atmospheres.

Observe the data of the respective declaration of conformity for the electric connection of intrinsically safe components.

It is essential to observe the data indicated in the respective IECEx approval.

### 2.8. Conformity

The IECEx CU ex ia control unit complies with the Directives according to the Declaration of Conformity.

### 2.9. Standards

Through the following standards, the conformity with the Directives is fulfilled:

EN IEC 60079-0: 2018


EN IEC 60079-11: 2012





## 3. General Terms

### 3.2. Design of IECEx CU ex ia 1 S&T 24V control unit

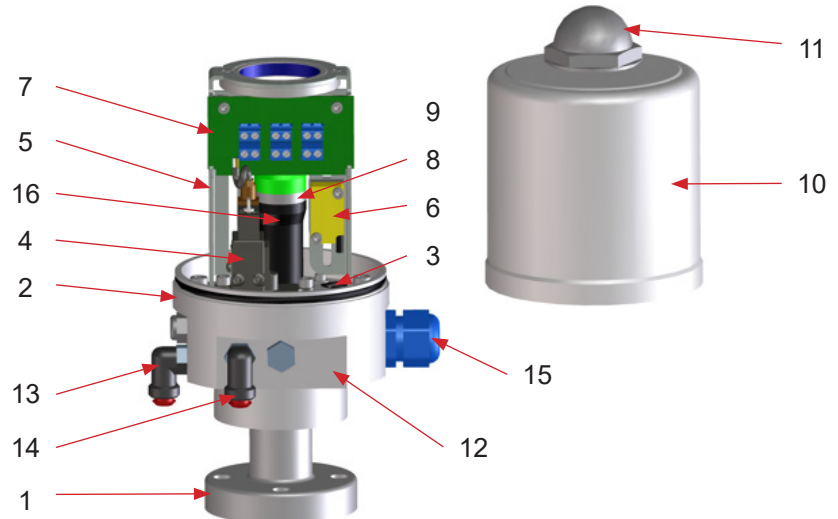

The control unit consists of the following components:

**Pos. 1 Adapter**

Assembly of control unit on different valve types

**Pos. 2 Control unit base with integrated air channels as well as electric and pneumatic connections.**

Accommodation of solenoid valves with integrated pneumatic connecting channels. Provision of pneumatic and electric connections, accommodation of all other components

**Pos. 3 Safety valve**

Protection against excess pressure within the control unit.

**Pos. 4 Solenoid valves**

**(illustrated: version with 1 solenoid valve)**

Compressed air supply for pneumatic valve actuators

**Pos. 5 Assembly bracket**

Accommodation and adjustment of valve position indicator, fixing of CU cover by transparent central screw

**Pos. 6 Proximity switches**

**(illustrated: internal proximity switches)**

Recording of corresponding open and closed valve position

---

### 3. General Terms

---

**Pos. 7 Connection - board(s)**

Connection of solenoid valves and proximity switches to the intrinsically safe circuits

**Pos. 8 Actuator screw**

Control of internal proximity switches

**Pos. 9 Signal rod**

Optical indication of valve position (colour selection: green and red)

**Pos. 10 Control unit cover**

Closure of control unit, IP protection IP65

**Pos. 11 Central union - sight glass**

Fixing of CU cover and indication of the position of the signal elements

**Pos. 12 Earthing screw**

Integration of control unit in local potential equalization

**Pos. 13 Air supply****Pos. 14 Pneumatic air to valve actuator**

Exit of solenoid valve 1

**Pos. 15 Cable union**

Connection of electric lines for the intrinsically safe circuits

**Pos. 16 Guide rod prolongation**

Connection of valve guide rod with the actuator screw and the signal rod

## 3. General Terms

### 3.3. Control Unit Variants / Product key / Marking

#### IECEX CU \*\*\*\* Variants

IECEX CU **** Type	Solenoid valve	Proximity switch
IECEX CU ex ia 1 S&T 24V  SPX FLOW article number H337798	3/2 solenoid valve 10 mm 6510-C02,5-FM08-0000-Z0-EXI/01-AW JB18+JF80+PD98 ID No. 00184394 SPX FLOW article No. 37785 Number: 1	NI3-Q10S-Y1X 0,15M Internal sensor  SPX FLOW article No. H332441 Number: 2
IECEX CU ex ia 2 S&T 24V  SPX FLOW article number H337797	3/2 solenoid valve 10 mm 6510-C02,5-FM08-0000-Z0-EXI/01-AW JB18+JF80+PD98 ID No. 00184394 SPX FLOW article No. H337785 Number: 2	NI3-Q10S-Y1X 0,15M internal sensor  SPX FLOW article No. H332441 Number: 2
IECEX CU ex ia 1 M 24V  SPX FLOW article number H337796	3/2 solenoid valve 10 mm 6510-C02,5-FM08-0000-Z0-EXI/01-AW JB18+JF80+PD98 ID No. 00184394 SPX FLOW article No. 337785 Number: 1	Ni5-K11-Y1X external sensor  SPX FLOW article No. H332442 Number: 2
IECEX CU ex ia 3 M 24V  SPX FLOW article number H337795	3/2 solenoid valve 10 mm 6510-C02,5-FM08-0000-Z0-EXI/01-AW JB18+JF80+PD98 ID No. 00184394 SPX FLOW article No. H337785 Number: 3	Ni5-K11-Y1X external sensor  SPX FLOW article No. H332442 Number: 2
IECEX CU ex ia 1 M D4 24V  SPX FLOW article number H344227	3/2 solenoid valve 10 mm 6510-C02,5-FM08-0000-Z0-EXI/01-AW JB18+JF80+PD98 Ident Nr. 00184394  SPX FLOW article No. H337785 Number: 1	NI3-Q10S-Y1X 0,15M Internal sensor SPX FLOW article No. H332441 Number: 1  Ni5-K11-Y1X external sensor SPX FLOW article No. H332442 Number: 1
IECEX CU ex ia 3 M D4 24V  SPX FLOW article number H344051	3/2 solenoid valve 10 mm 6510-C02,5-FM08-0000-Z0-EXI/01-AW JB18+JF80+PD98 Ident Nr. 00184394  SPX FLOW article No. H337785 Number: 3	NI3-Q10S-Y1X 0,15M Internal sensor SPX FLOW article No. H332441 Number: 1  Ni5-K11-Y1X external sensor SPX FLOW article No. H332442 Number: 1

## 3. General Terms

### 3.3. Control Unit Variants / Product key / Marking

#### IECEX CU \* \* \* \* Product key

IECEX CU	*	*	*	*
----------	---	---	---	---





<table border="1"> <tr> <td style="width: 10px;"> </td> <td style="width: 10px;"> </td> <td style="width: 10px;"> </td> <td style="width: 10px;"> </td> </tr> </table>					Nominal voltage	24V		
	Proximity sensors	S&T M M D4	seat, butterfly valve mix proof valve mix proof valve	internal proximity switch external proximity switch internal and external prox. switch				
	Solenoid valves	1 2 3	1 solenoid 2 solenoids 2 solenoids	single seat, butterfly, mix proof valves without seat lifting single seat SD valves with additional closing pressure mix proof valves with seat lifting				
Ignition protection type	ex ia	intrinsic safety						

#### Marking:

**II 2G**  
**Ex ia IIC T4 Gb**  
**Ambient temperature range: - 10 °C to + 55 °C**

## 3. General Terms


### 3.4. Control unit adapter incl. actuating and signal element

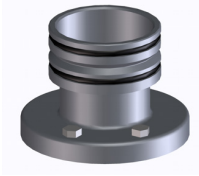single seat valves	butterfly valves	double seat valves	D4 double seat valves
			

#### Signal rod

The optical position indication at the valve is realized via the signal rod which indicates the valve position through the sight glass. For different valve types, normally closed and normally open, respectively one red and one green signal rod form part of the scope of supply.

The valve position of double seat valves is indicated via the LED at the proximity switches installed in the actuator.

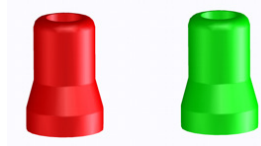

### 3.5. Fitting position



Vertical installation is the preferred fitting position, protective type IP 65 is reached.

Please observe that for all other fitting positions the protective type IP 65 is not applicable.

## 4. Technical Data

### 4.1. General terms

<b>Ambient temperature:</b>	- 10 °C to + 55 °C
<b>Air hose:</b>	6 mm / ¼" OD
<b>Pressure range:</b>	6 to 8 bar

### 4.2. Materials

Materials	Designation
1.4305 stainless steel / AISI 303	CU base
1.4301 stainless steel / AISI 304	CU adapter
1.4301 stainless steel / AISI 304	CU cover
1.4301 stainless steel / AISI 304	assembly bracket
PA-T	sight glass
PVC/PEHD	signal rod
PA6	guide rod prolongation
1.4523 stainless steel	actuator screw

### 4.3. Compressed air quality

#### Quality class acc. to DIN/ISO 8573-1

- content of solid particles: quality class 3,  
max. size of solid particles per m<sup>3</sup>  
10000 of 0,5 µm < d ≤ 1,0 µm  
500 of 1,0 µm < d ≤ 5,0 µm
- content of water: quality class 3,  
max. dew point temperature - 20 °C  
For installations at lower  
temperatures or at higher altitudes,  
additional measures must be  
considered to reduce the pressure  
dew point accordingly.
- content of oil: quality class 1,  
max. 0,01 mg/m<sup>3</sup>



The oil applied must be compatible with Polyurethane elastomer materials.

## 4. Technical Data

### 4.4. Valve position indicator

Valve position indicator (**internal installation**)

**Turck NI3-Q10S-Y1X 0,15m**  
 admission KEMA 02 ATEX 1090X  
 II 2G Ex ia IIC T6 Gb  
 Ui=20V / li=60mA / Pi = 200mW

Valve position indicator (**external installation**)

**Turck Ni5-K11-Y1X**  
 admission KEMA 02 ATEX 1090X  
 II 2G Ex ia IIC T6 Gb  
 Ui=20V / li=60mA / Pi = 200mW

Manufacturer	Product and type	Certificate	Standards
Hans Turck GmbH & Co. KG	Internal proximity switch type NI3-Q10S-Y1X 0,15M	KEMA 02 ATEX 1090 X	EN 60079-0:2012 + A11:2013* EN 60079-11:2012
	External proximity switch type Ni5-K11-Y1X		

\*The technical changes of the Standards EN 60079-0:2012 +A11:2013 and EN IEC 60079-0:2018 were evaluated and turned out to the satisfaction of TÜV NORD CERT GmbH.

The operating conditions indicated in the Type Examination Certificate must be observed!

### 4.5. Solenoid valves

Bürkert solenoid 3/2 way 6510 with flipper valve type 6144 24 V  
 Ui = 25 V / li = 158 mA / Pi = 1000 mW  
 Ci = negligibly low; Li = negligibly low

Manufacturer	Product and type	Certificate	Standards
Bürkert Werke GmbH & Co. KG	Solenoid valve type 6144	PTB 07 ATEX 2048	EN 60079-0:2018 EN 60079-11:2012

The operating conditions indicated in the Type Examination Certificate must be observed!

---

## 5. CU Assembly and Startup

---




- The adapter for the respective valve is mounted on the actuator by means of the supplied assembly screws.
- With S&T adapters, the next step is to assemble the actuator screw and the signal rod (green or red) on the guide rod prolongation. Recommended max. tightening torque of union is 2.1 Nm (securing with Loctite semi-solid is recommended).
- The corresponding control unit is placed on the adapter and tightened with the inner hexagon screws.
- Air hosing.
- Electric connection.



## 5. CU Assembly and Startup

### 5.1. Pneumatic air connection

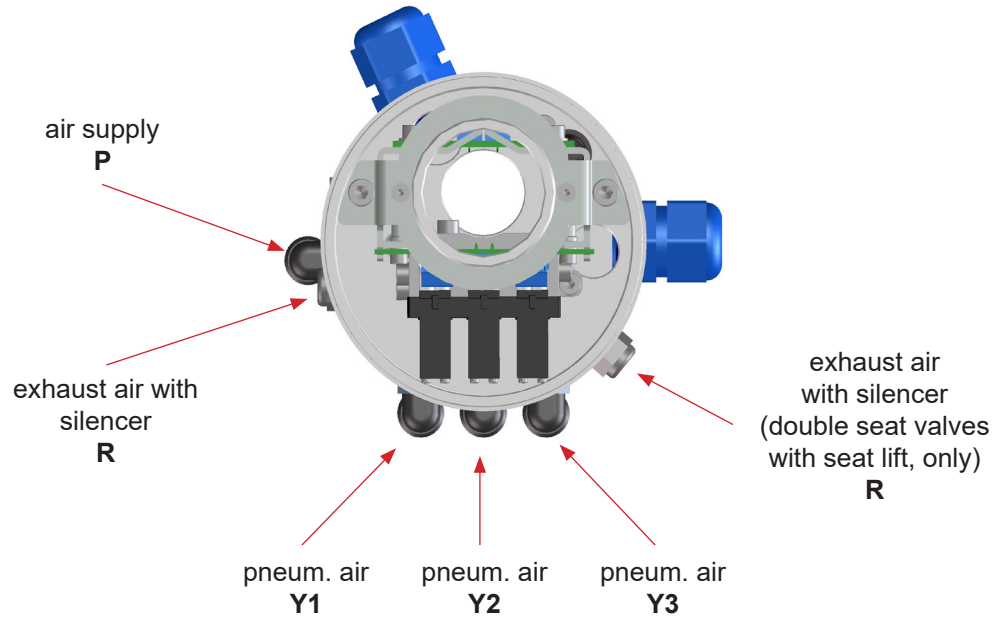

#### Control unit with 1 solenoid valve

- P** air supply
- Y 1** exit pneumatic air - solenoid valve 1  
main actuator

#### Control unit with 1 solenoid valve and NOT-element

- P** air supply
- Y 1** exit pneumatic air - solenoid valve 1  
main actuator
- Y 2** exit pneumatic air NOT-element  
e.g. actuator spring side

#### Control unit with 3 solenoid valves

- P** air supply
- Y 1** exit pneumatic air - solenoid valve 1  
main actuator DA3+
- Y 2** exit pneumatic air - solenoid valve 2  
seat lift cylinder - upper DA3+
- Y 3** exit pneumatic air - solenoid valve 3  
seat lift cylinder - lower DA3+



**Caution!** Shut off compressed air supply before connection of the air hose!

See to a careful cutting to length of the air hose and use a hose cutter.

## 5. CU Assembly and Startup

### **Pneumatic air to valve actuator:**

Connection of pneumatic air connection Y1 with valve actuator.  
 For double seat valves, the pneumatic air connections Y1, Y2, Y3 to the valve actuators must be connected.

With the IECEx CU ex ia 2 S&T 24 V the pneumatic air connection Y2 must be connected with the spring side of the actuator. Observe the assembly of the pressure reducing valve at the spring side of the actuator.

### **Exhaust air:**

The standard exhaust air union is provided with a silencer. If required, the silencer can be removed and exhaust air can be hoses separately if, for example, it must be discharged to the outside.

### 5.2. Electrical connection

The intrinsically safe circuits for solenoid valves and valve position indicators (proximity switches) must be connected to the PLC only with appropriate isolation amplifiers.



#### **Caution!**

Electrical connections must only be carried out by qualified technical personal.

The selection of the corresponding connecting cable is undertaken on the basis of the control unit variant.

The regulation for the installation of intrinsically safe circuits according to ATEX and IEC Directives must be observed.

The cable is guided through the cable union and connected according the wiring diagram.

Use of wire end ferrules is preferred!



For the installation of the intrin safe components (ex ia solenoids and ex ia proximity switches), the application of silicone hoses for every single wire is important!

Moreover, it is recommended to use wire end ferrules.




Make sure that the appropriate silicone hose (H337909) which is delivered together with IECEx CU ex ia control units is used!

Firmly tighten the cable union - by this means, only, the corresponding protective type can be provided.

## 5. CU Assembly and Startup

### 5.3. Wiring diagrams

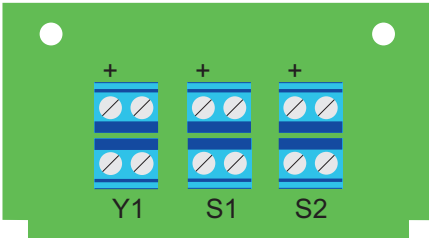


#### IECEx CU ex ia 1 S&T 24V

1 solenoid valve

2 internal sensors

Y1 solenoid valve 1  
S1 proximity switch  
S2 proximity switch

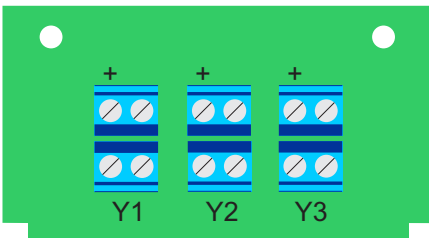


#### IECEx CU ex ia 2 S&T 24V


2 solenoid valves

2 internal sensors

Y1 solenoid valve 1  
Y2 solenoid valve 2  
Y3 not used  
S1 proximity switch  
S2 proximity switch

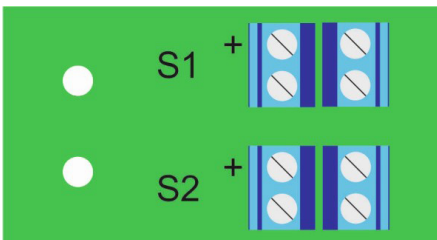

## 5. CU Assembly and Startup

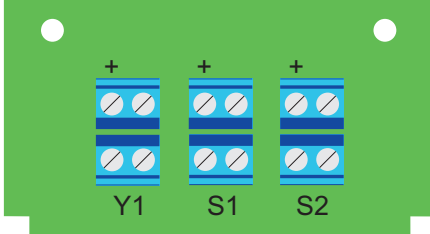


### IECEX CU ex ia 1M 24V

1 solenoid valve

2 external sensors

Y1 solenoid valve 1  
S1 proximity switch

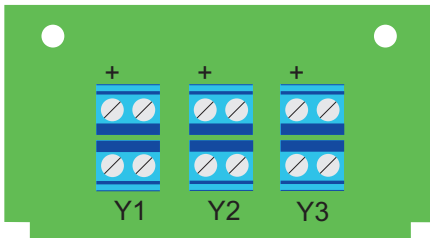


### IECEX CU ex ia 3M 24V

3 solenoid valves

2 external sensors


Y1 solenoid valve 1  
Y2 solenoid valve 2  
Y3 solenoid valve 3  
S1 proximity switch  
S2 proximity switch

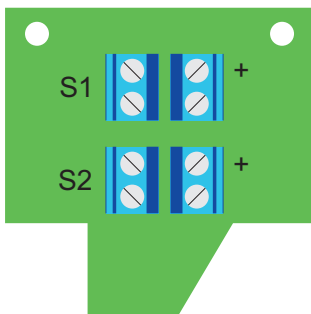


## 5. CU Assembly and Startup

### IECEX CU ex ia 1M D4 24V

1 solenoid valve, 1 internal sensor, 1 external sensor

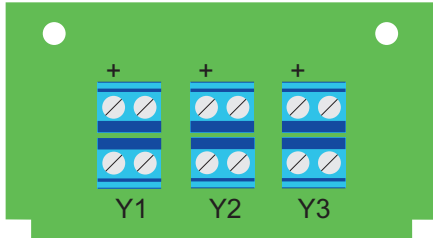


Y1 solenoid valve 1  
 Y2 not used  
 Y3 not used  
 S1 proximity switch  
 S2 proximity switch

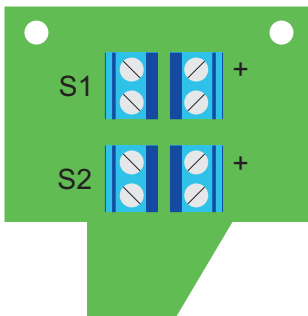


### IECEX CU ex ia 3M D4 24V

3 solenoid valves, 1 internal sensor, 1 external sensor

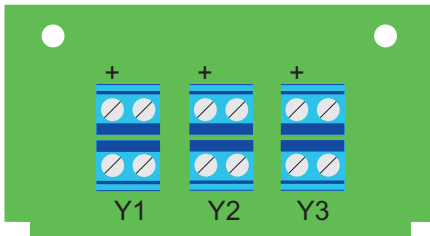

Y1 solenoid valve 1  
 Y2 solenoid valve 2  
 Y3 solenoid valve 3  
 S1 proximity switch  
 S2 proximity switch

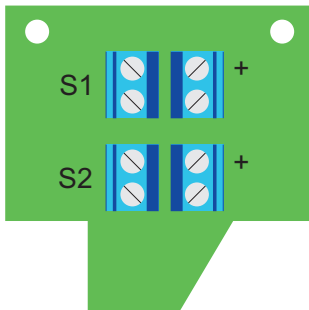

---

## 5. CU Assembly and Startup

---

### 5.3.1 Electric connection

#### a) Proximity switches

For the electrical installation of ex ia proximity switches, carefully read the instruction manual of the supplier. Please ensure the appropriately required wiring specification.

Look at the connecting terminal of the IECEx control unit to see the description where to connect the wires!

#### b) Solenoid valves

For the electrical installation of ex ia solenoid valves, carefully read the instruction manual of the supplier. Please ensure the appropriately required wiring specification.

Look at the connecting terminal of the IECEx control unit to see the description where to connect the wires!


## 5. CU Assembly and Startup

### 5.4. Adjustment of valve position indicator



**Caution!** Media/liquids must not be in the valve during valve control and adjustment of the valve position indicator.

**Caution!** Risk of injury through movable parts.

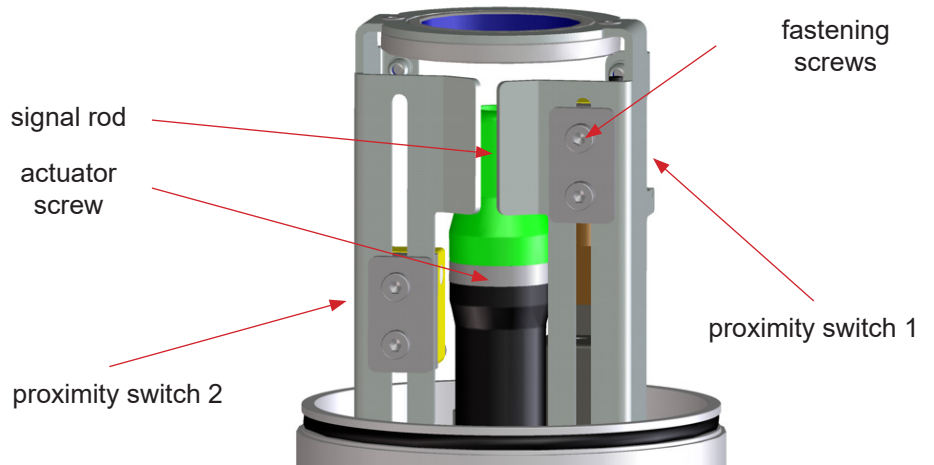

Butterfly valves / Single seat valves (internal position indicator)  
Adjustment of the feedbacks for open and closed valve position must be carried out as described hereinafter.

In order to adjust the positions of the proximity switches, release the fastening screws to such a degree that the corresponding sensor in the bar of the mounting bracket can be moved.  
After adjustment and inspection, re-tighten the fastening screws.


Double seat valves DE3, DA3 are equipped with 2 external proximity switches which do not need to be adjusted

## 5. CU Assembly and Startup




**Caution!** Media/liquids must not be in the valve during valve control and adjustment of the valve position indicator.  
**Caution!** Risk of injury through movable parts.

D4 double seat  
mix proof valve  
in closed position

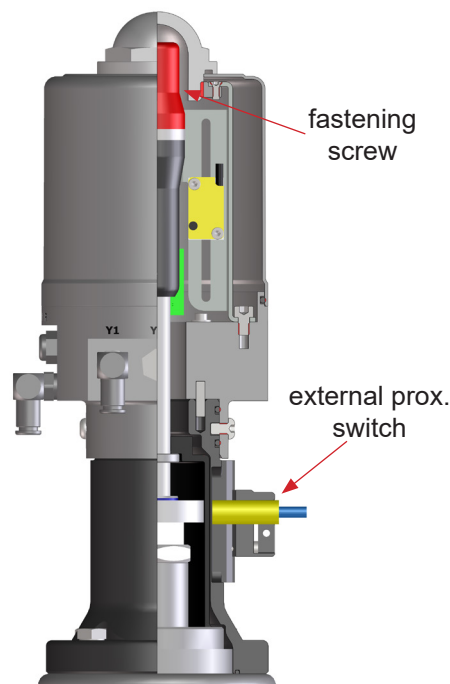

D4 double seat  
mix proof valve  
in open position

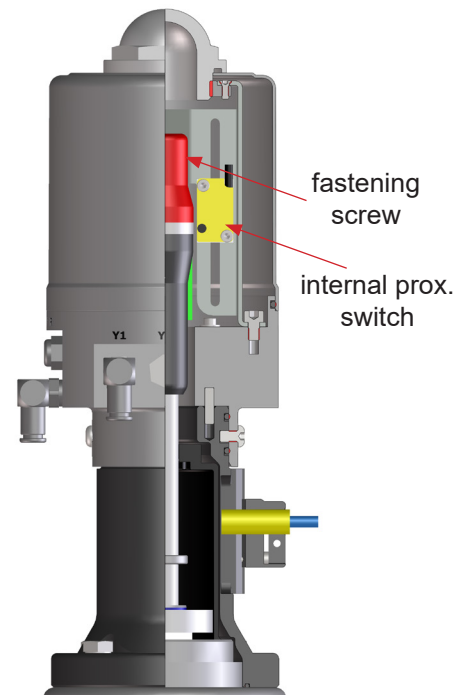

Double seat mix proof valves of the D4 series are equipped with 1 internal and 1 external proximity switches which need to be adjusted.

Adjustment of external sensor / closed valve position:

For adjustment of the closed valve position, loosen the screws of the proximity switch holders. Insert the proximity switches until stop and tighten the holder with a small screw. Move the complete bracket up and down until the sensor signal appears. Fix the bracket in this position with the two screws.

Adjustment of internal sensor / open valve position:

In order to adjust the positions of the proximity switch, release the fastening screws to such a degree that the corresponding sensor in the bar of the mounting bracket can be moved. Move the complete bracket up and down until the sensor signal appears. Fix the bracket in this position with the two screws.



## 5. CU Assembly and Startup

For normally closed (normally open) single seat valves or butterfly valves, the following allocation is applied:

Closed valve position                      proximity switch 1  
activated

For the adjustment, slide proximity switch 1 with non-activated (activated) solenoid valve 1 into the required position by moving the guide bar. The LED at the proximity switch lights up.

Open valve position                      proximity switch 2  
activated

To adjust proximity switch 2, activate solenoid valve 1. This can be carried out either manually or electrically. The valve moves by one stroke and further into the corresponding final position.

The open valve position and the corresponding feedback can be adjusted. Move the sensor in the guide bar into the required position. The LED at the proximity switch lights up.



Observe the switching hysteresis of the proximity switches! Therefore, adjust the switch-point of the sensors with overlap in order to permit small variations and, thus, to prevent failures!

### Double seat mix proof valves

DE3, DA3 valve series:

The assembly of the proximity switches is carried out at the actuator of the corresponding double seat valve. Observe the instruction manual for double seat valves for this purpose!

D4 valve series:

The internal sensor shows the open position and needs to be adjusted.

The external sensor shows the closed position and needs to be adjusted.


## 5. CU Assembly and Startup

### 5.5. Potential equalization



During the assembly of the IECEX CU ex ia control unit on valves with stainless steel actuator, usually a potential equalization from the control unit via the adapter to the process valve is made and, thus, to the earthed piping system as all mentioned components are made of conductive material (stainless steel).

IECEX CU ex ia control units on double seat valves must be integrated separately into the potential equalization as these valves are equipped with non-conductive plastic actuators on which the control unit is installed. For this purpose, the base of the control unit is provided with a M5 earthing screw by means of which the control unit must be integrated into the potential equalization.

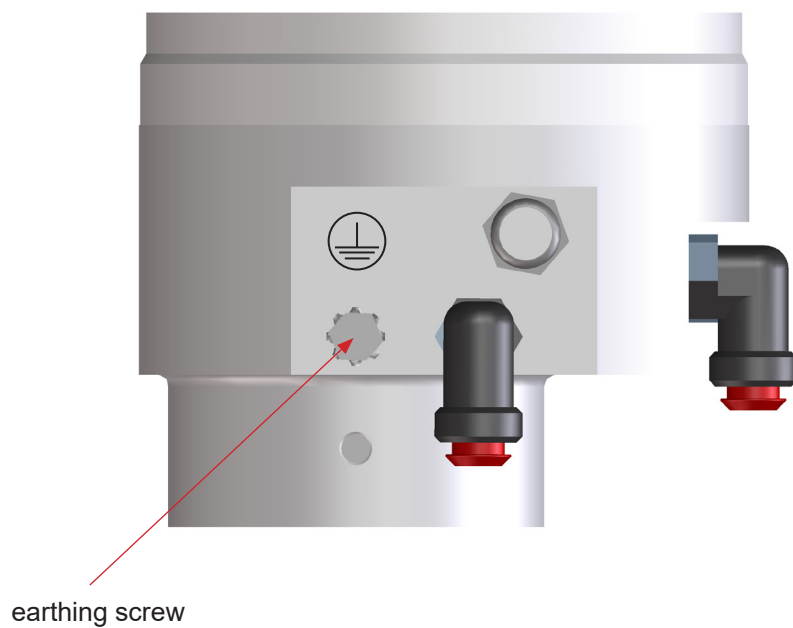

---

## 6. Accessories and Tools / Tightening torques

---

**Assembly/disassembly adapter on valve actuator:**

- S-adapter / ring spanner 13 mm
- T and M adapter /  
hexagon socket wrench 4 mm  
ring spanner 13mm

**Assembly/disassembly CU on adapter:**

- hexagon socket wrench 4 mm

**Assembly/disassembly feedback unit:**

- hexagon socket wrench 4 mm

**Assembly/disassembly proximity switches:**

- hexagon socket wrench 2.5 mm
- hexagon socket wrench 3 mm

**Assembly/disassembly solenoid valves:**

- hexagon socket wrench 4 mm

**Assembly/disassembly air connections:**

- ring spanner 13 mm
- hexagon socket wrench 4 mm

**Assembly/disassembly safety valve:**

- hexagon socket wrench 2.5 mm

**Assembly/disassembly control unit cover  
by screw plug**

- ring spanner 42 mm  
recommended torque in Nm 12-15

**Loctite semi-solid**


## 7. Disassembly

### 7.1 General terms



**Ensure the following matters before the dismantling process:**

- Valve must be in the safety position and must not be controlled!
- Shut off supply air!
- Switch off current at the control unit, i.e. interrupt supply voltage!

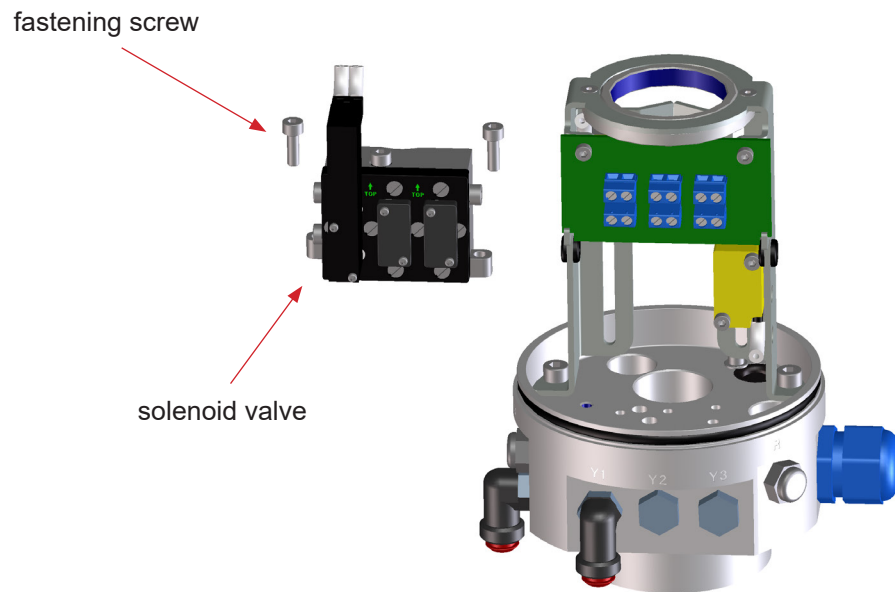


(Picture shows IECEX CU ex ia 1S&T 24V.)

### 7.2 Dismantling of solenoid valve

- + Open the control unit cover by turning the sight glass and lift off the cover.
- + Release the screw connection of the corresponding connecting cable at the connection board.
- + Release and remove the 2 screws.
- + Replace the solenoid valve.
- + Assembly in reverse order. See to an even fit of the flat seal!

## 7. Disassembly

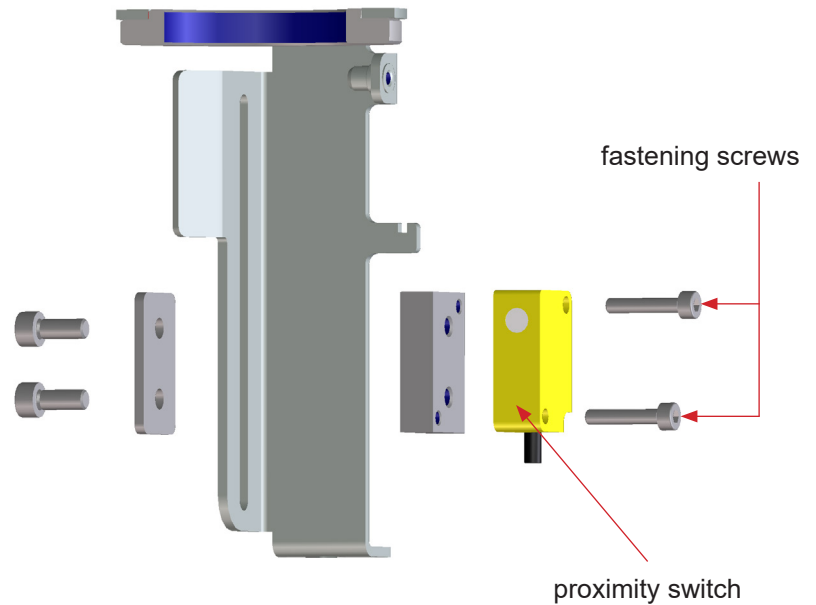

### 7.3 Dismantling of proximity switches

- + Release the screw connection of the corresponding connecting cable at the connection board.
- + Remove the 2 fastening screws.
- + Replace the proximity switch.
- + Assembly in reverse order.
- + Check the right position of the proximity switches and their functionality as described in chapter 5.4 Adjustment of the valve position indicators.

---

## 8. Spare Parts Lists

---


The reference numbers of the spare parts for the different valve designs and sizes are included in the attached spare parts drawings with corresponding lists.

Please indicate the following data to place an order for spare parts:

- number of required parts
- reference number
- designation

Data are subject to change.

Weitergabe sowie Vervielfältigung dieser Unterlage, Verwertung und Mitteilung ihres Inhalts nicht gestattet, soweit nicht schriftlich zugestanden. Verstoß verpflichtet zum Schadensersatz und kann strafrechtliche Folgen haben (Paragraph 18 UWG, Paragraph 106 UrhG). Eigentum und alle Rechte, auch für Patenterteilung und Gebrauchsmustereintragung, vorbehalten. SPX FLOW, Germany

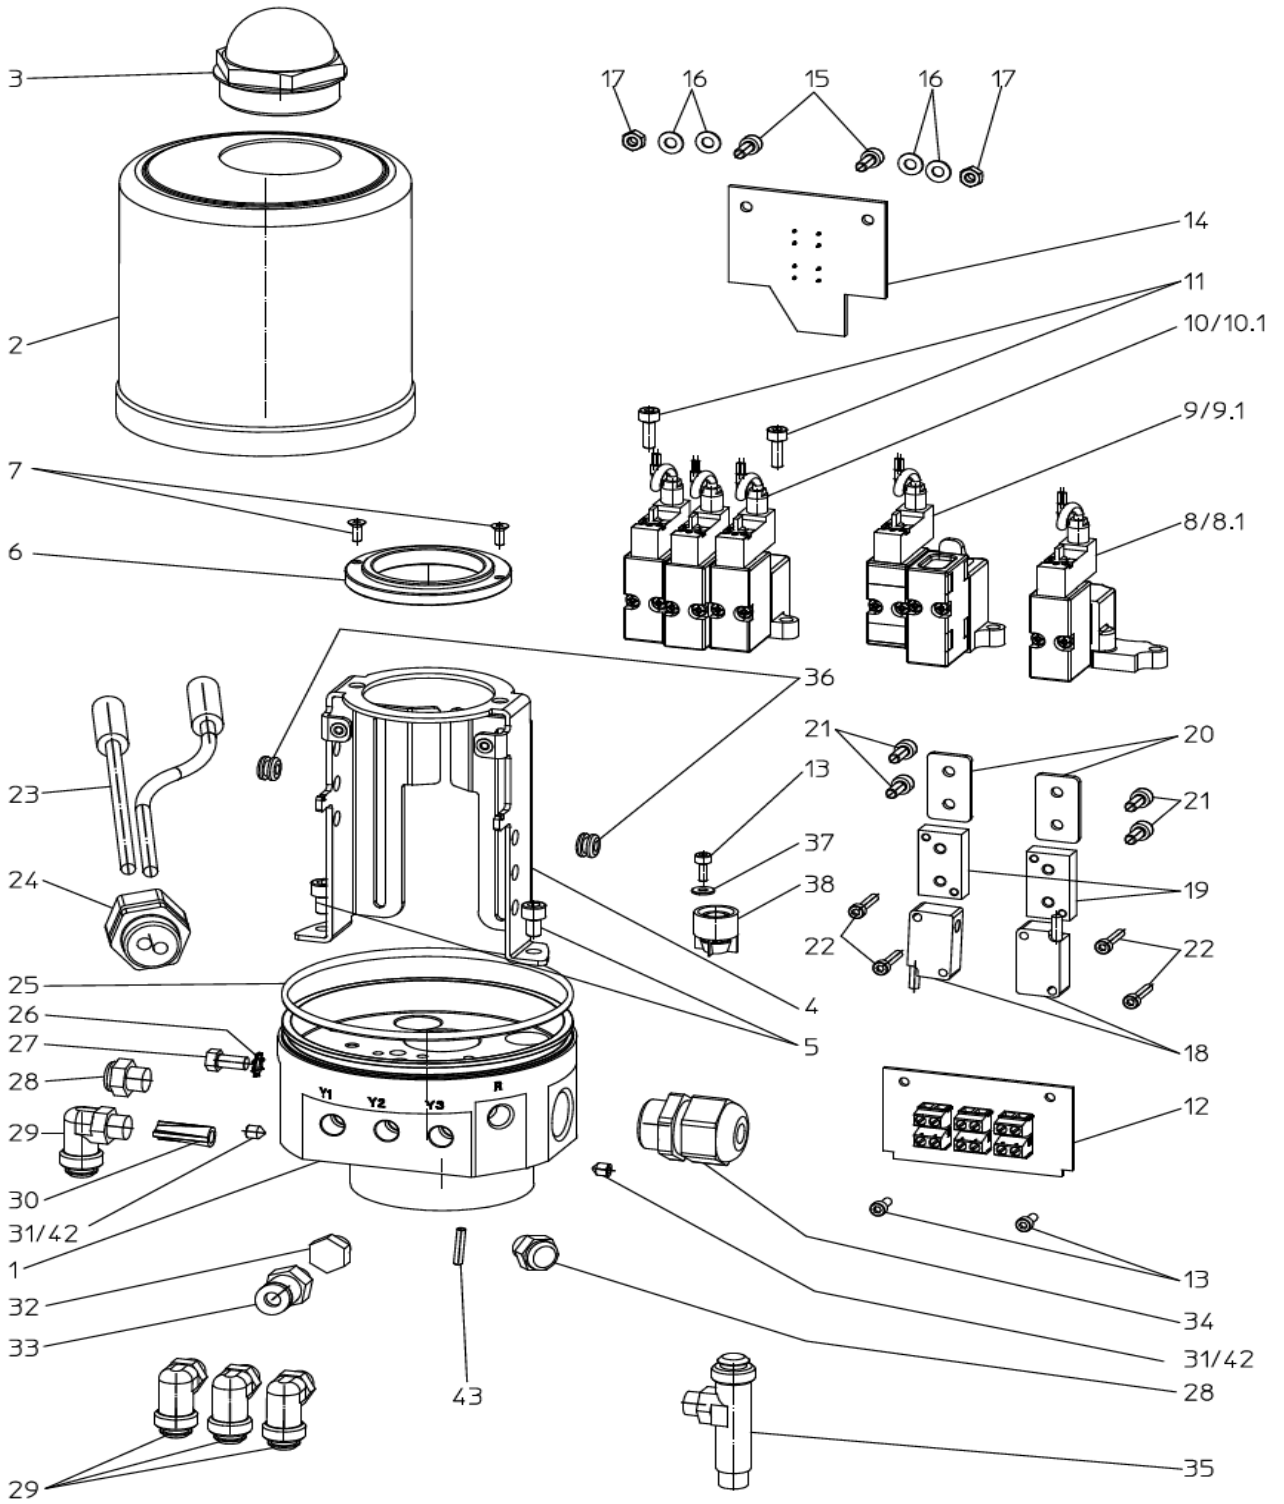

Datum:	17.10.17	28.11.17	18.06.21							
Name:	C.Keil	C.Keil	C.Keil							
Geprüft:										

Ersatzteilliste: spare parts list

IECEX CU ex ia



SPX FLOW  
Germany

Blatt 1 von 4

RN IECEX 01.044.7

Ersatzteilliste: spare parts list

**IECEx CU ex ia**



pos. item		Menge quantity	Beschreibung description	Material	IECEx CU ex ia 1 S&T 24V	IECEx CU ex ia 2 S&T 24V	IECEx CU ex ia 1M 24V	IECEx CU ex ia 3M 24V	IECEx CU ex ia 1M D4 24V	IECEx CU ex ia 3M D4 24V
					WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.
1	1		ATEX CU 3-M Base	1.4305	08-45-530/17 H337798	08-45-531/17 H337797	08-45-540/17 H337796	08-45-541/17 H37795	08-45-509/17 H344227	08-45-507/17 H344051
2	1		ATEX CU Haube ATEX CU cap	1.4301						
3	1		Schauglas - G 1 1/4" komplett sight glass - G 1 1/4" complete	PA-T						
4	1		ATEX CU Montagebügel ATEX CU assembly bracket	1.4301						
5	2		Schraube M5x8 DIN EN ISO 4762 cap screw M5x8 DIN EN ISO 4762	A2-50						
6	1		ATEX CU - Gewindingring G1 1/4" ATEX CU - thread ring G1 1/4"	1.4301						
7	2		Senkschraube M3x8 EN ISO 10642 countersunk screw M3x8 EN ISO 10642	A2-50						
8	1-2		IECEx CU ex ia 1EMV interface block 24 V IECEx CU ex ia 1EMV interface block 24 V	1.4305	08-46-832/17 H337792		08-46-832/17 H337792		08-46-832/17 H337792	
9	1		IECEx CU ex ia 2EMV interface block 24 V IECEx CU ex ia 2EMV interface block 24 V	1.4305		08-46-831/17 H337791				
10	1		IECEx CU ex ia 3EMV interface block 24 V IECEx CU ex ia 3EMV interface block 24 V	1.4305						
11	2		Schraube M4x12 DIN EN ISO 4762 cap screw M4x12 DIN EN ISO 4762	A2-50				08-46-830/17 H337790		08-46-830/17 H337790
								65-03-258/13 H127361		

Datum:	17.10.17	28.11.17	18.06.21
Name:	C. Keil	C. Keil	C. Keil
Geprüft:			



Blatt 2 von 4

**RN IECEx 01.044.7**



Ersatzteilliste: spare parts list

**IECEx CU ex ia**



pos. item	quantity	Beschreibung description	Material	IECEx CU ex ia 1 S&T 24V		IECEx CU ex ia 2 S&T 24V		IECEx CU ex ia 1M 24V		IECEx CU ex ia 3M 24V		IECEx CU ex ia 1M D4 24V		IECEx CU ex ia 3M D4 24V	
				WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.		
12	1	ATEX CU Platine ATEX CU PCB			08-46-651/99 H332438							08-46-652/99 H332841			
13	3	Schraube M3x8 DIN EN ISO 4762 cap screw M3x8 DIN EN ISO 4762	A2-50												
14	1	ATEX CU Sensorplatine ATEX CU sensor PCB			08-46-653/99 H337917										
15	2	Schraube M4x10 DIN EN ISO 4762 cap screw M4x10 DIN EN ISO 4762	A2-50												
16	4	Scheibe A 4,3 DIN 125 B washer A 4,3 DIN 125 B	A2												
17	2	Sechskantmutter M4 DIN EN 24032 hexagon nut M4 DIN EN 24032	A2												
18	2/1	Initiator Ni3-Q10S-Y1X prox switch Ni3-Q10S-Y1X			08-46-662/93 H332441										
19	2/1	ATEX CU Sensorunterlage ATEX CU sensor pad	PA6		08-46-666/93 H332443										
20	2/1	ATEX CU Halteblech ATEX CU retaining plate	1.4301		08-46-990/13 H332444										
21	4/2	Schraube M4x10 DIN EN ISO 4762 cap screw M4x10 DIN EN ISO 4762	A2-50		65-03-256/13 H78985										
22	4/2	Schraube M3x16 DIN EN ISO 4762 cap screw M3x16 DIN EN ISO 4762	A2-50		65-03-209/13 H78981										
23	2/1	Initiator Ni5 K11-Y1X proximity switch Ni5 K11-Y1X													
24	1	ATEX Kabelversch. M20x1,5 Kabel 2x ø5mm ATEX cable union M20x1,5 cable 2x ø5mm	PA												
25	1	O-Ring 94,92 x 2,62	NBR												
26	1	Sechskantschraube M5x10 DIN EN 24017 hexagon screws M5x10 DIN EN 24017	A2-50												
27	1	Zahnscheibe A-5,3 DIN6797 toothed washer A-5.3 DIN6797	A2												

**APV**  
SPX FLOW  
Germany

Datum:	17.10.17	28.11.17	18.06.21
Name:	C.Keil	C.Keil	C.Keil
Geprüft:			
Datum:			
Name:			
Geprüft:			

Blatt 3 von 4  
**RN IECEx 01.044.7**

Ersatzteilliste: spare parts list

**IECEX CU ex ia**



pos. item	quantity	Beschreibung description	Material	IECEX CU ex ia 1 S&T 24V		IECEX CU ex ia 2 S&T 24V		IECEX CU ex ia 1M 24V		IECEX CU ex ia 3M 24V		IECEX CU ex ia 1M D4 24V		IECEX CU ex ia 3M D4 24V	
				WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.				
28	1-2	Schalldämpfer sound reducer	Ms / vern.												
29	2-4	W-Verschraubung G1/8" 6x1 Elbow connector G1/8" 6x1	Ms / vern.												
30	1	CU4 Luftfilter CU4 air filter	PE-porös												
31	2	Gewindestift M5x6 ISO4027 hexagon socket set screws M5x6 ISO4027	A2-50		65-15-052/13 H332436										
32	1/2	Blindstopfen G1/8" plug G1/8"	Ms / vern.												
33	1	Blindstopfen M20x1,5 V-INOX ex. blind cap M20x1,5 V-INOX ex.	Edelstahl												
34	1/2	ATEX Kabelversch. M20x1,5 Kabel ø6-12mm ATEX cable union M20x1,5 cable ø6-12mm	PA		08-46-655/93 H332439									08-46-655/93 H332439	
35	1-2	Gummifülle rubber grommet	PA		08-46-152/93 H332952									08-46-152/93 H332952	
36	1	Scheibe A 3,2 DIN9021 washer A 3,2 DIN9021	A2												
38	1	CU4 Überströmventil CU4 pressure relief valve	PPS												
39	1	Steckversch. GERADE selbstabs IQSK connection direct automatic lock	Ms / vern.												
40	1	Druckreduzierventil 5Bar pressure reduce valve 5 bar													
41	1	Silikon Schlauch 2mm x 1,5mm silicon-hose 2mm x 1,5mm	Silicon												
42	1	Flachkopf schraube M5x8 Flat head screw M5x8	1.4301												
43	1	parallel pin 4x16 parallel pin 4x16	1.4301												

Datum:	17.10.17	28.11.17	18.06.21
Name:	C. Keil	C. Keil	C. Keil
Geprüft:			
Datum:			
Name:			
Geprüft:			

Blatt	4	von	4
<b>RN IECEX 01.044.7</b>			




Weitergabe sowie Vervielfältigung dieser Unterlage, Verwertung und Mitteilung ihres Inhalts nicht gestattet, soweit nicht schriftlich zugestanden. Verstößt verpflichtet zum Schadensersatz und kann strafrechtliche Folgen haben. (Paragraf 18 UWG, Paragraph 106 UmG); Eigentum und alle Rechte, auch für Patenterteilung und Gebrauchsmustererteilung, vorbehalten. SPX FLOW, Germany

Ersatzteilliste: spare parts list

**ATEX CU Adapter**

Datum:	09/14	13.04.15	01.09.16	18.06.21
Name:	Spliethoff	Trytko	Trytko	C.Keil
Geprüft:				




Blatt	1	von	3
<b>RN ATEX 01.044.7</b>			

ATEX CU D4-Adapter

ATEX CU M-Adapter

ATEX CU S-Adapter

ATEX CU T-Adapter & ATEX CU Tmax Adapter

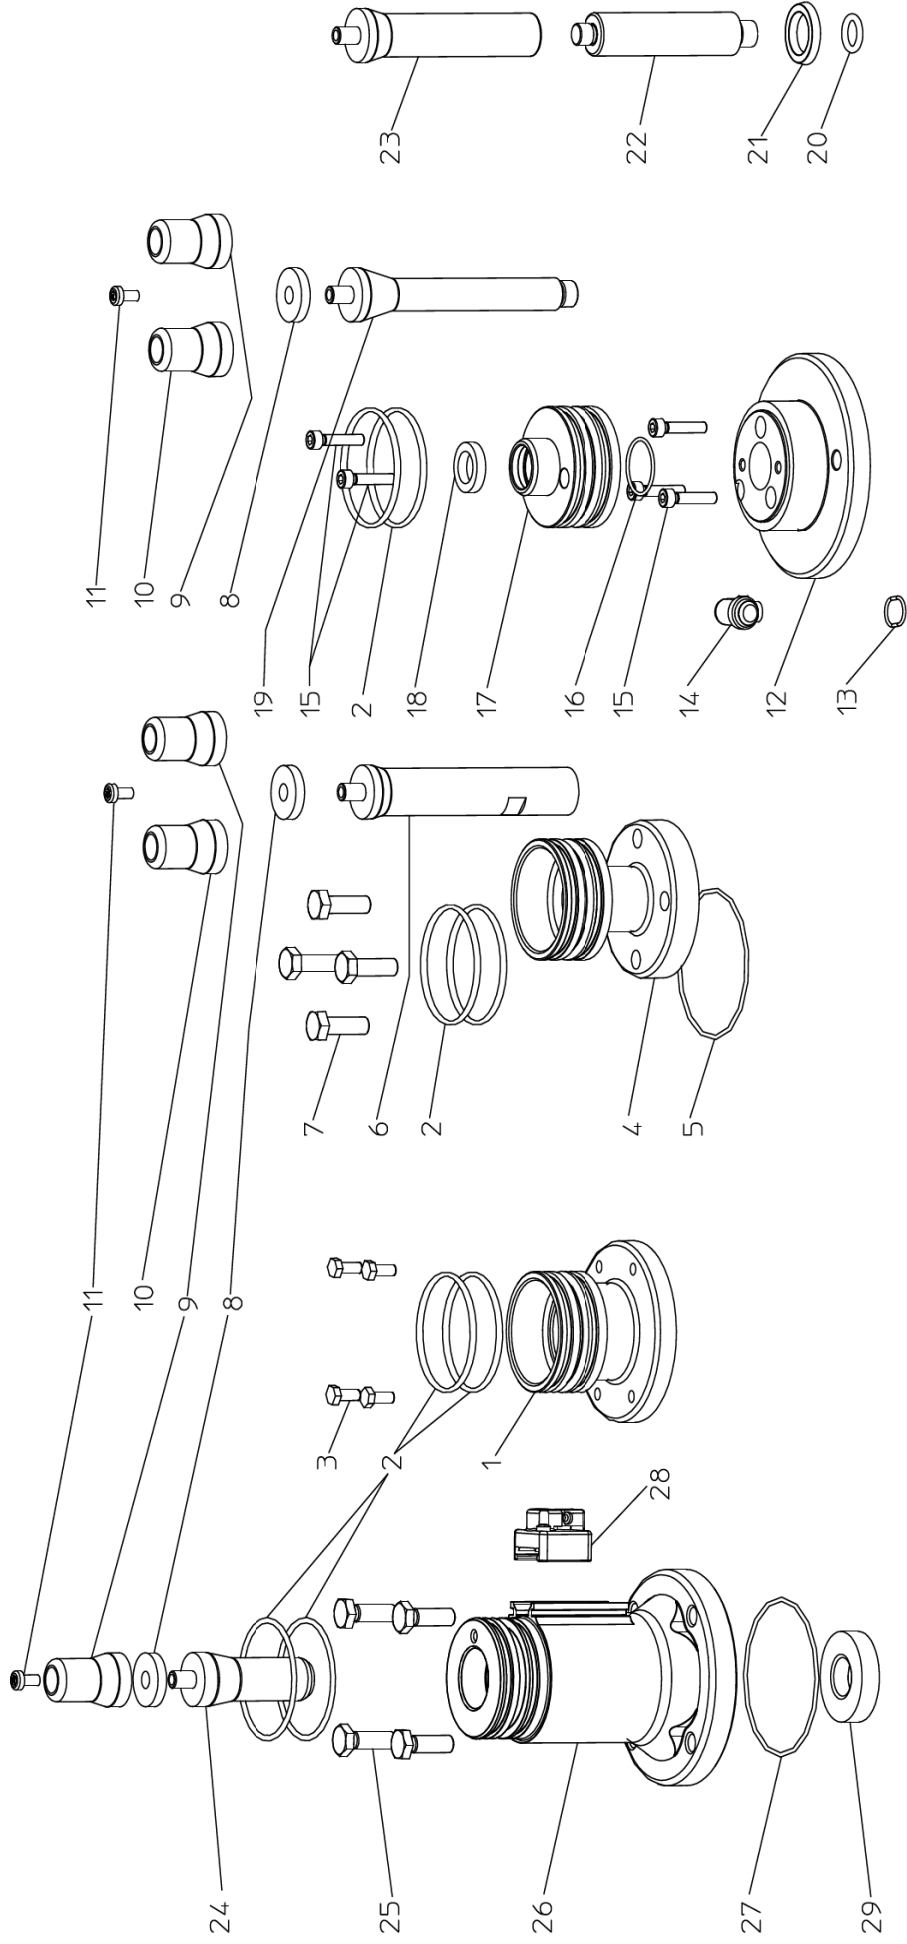

Ersatzteilliste: spare parts list

**ATEX CU Adapter**

pos. item	Menge quantity	Beschreibung description	Material	ATEX CU M-Adapter		ATEX CU S-Adapter		ATEX CU T-Adapter		ATEX CU Tmax-Adapter		IEEx CU ex ia D4-Adapter	
				WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.		
				08-48-685/17 H332573	08-48-680/17 H332570	08-48-683/17 H332571	08-48-684/17 H332572	08-46-765/99 H332452	08-46-775/93 H332455	08-46-761/12 H332448	08-46-647/93 H343596		
1	1	ATEX CU M - Adapter	1.4301	08-46-752/12 H332446									
2	2	O-Ring 50,47 x 2,62	NBR			58-06-225/83 H332451							
3	4	Schraube M5x12 DIN EN ISO 4762 cap screw M5x12 DIN EN ISO 4762	A2-50	65-05-053/13 H78999									
4	1	ATEX CU S - Adapter	1.4301		08-46-750/12 H332445								
5	1	O-Ring 66 x 2	NBR		58-06-297/83 H173930								
6	1	ATEX CU S - Zugstangenverlängerung ATEX CU S - tie rod extension	PA6		08-46-770/93 H332453								
7	4	Schraube M8x25 DIN EN ISO 4014 screw M8x25 DIN EN ISO 4014	A2-50		65-01-089/15 H120284								
8	1	ATEX CU Schaltnocke ATEX CU operating cam	1,4523			08-46-765/99 H332452							
9	1	ATEX CU - S & T - Signalstab rot ATEX CU - S & T - signal rod red	PVC			08-46-775/93 H332455							
10	1	ATEX CU - S & T Signalstab grün ATEX CU - S & T - signal rod green	PE HD			08-46-776/93 H332578							
11	1	EJOT DELTA PT Schraube WN 5452 50x10 EJOT DELTA PT screw WN 5452 50x10	A2			65-17-14013 H320366							
12	1	ATEX CU T - Adapter Unterteil ATEX CU T - adapter lower part	1.4301			08-46-761/12 H332448							
13	1	O-Ring 14 x 1,78	NBR			58-06-002/83 H76891							
14	1	W-Verschraubung G1/8"/Ø6mm schwenkbar W-Union G1/8" /Ø6mm slewable	Ms/vern.			08-60-750/93 H208825							

Datum:	09/14	13.04.15	01.09.16	18.06.21
Name:	Spliethoff	Trytko	Trytko	C.Keil
Geprüft:				

Datum:				
Name:				
Geprüft:				

Blatt 2 von 3  
RN ATEX 01.044.7



Weitergabe sowie Vervielfältigung dieser Unterlage, Verwertung und Mitteilung ihres Inhalts nicht gestattet, soweit nicht schriftlich zugestanden. Verstößt verpflichtet zum Schadensersatz und kann strafrechtliche Folgen haben (Paragraf 18 UWG, Paragraf 106 UrhG). Eigentum und alle Rechte, auch für Patenterteilung und Gebrauchsmustereintragung, vorbehalten. SPX FLOW, Germany

Ersatzteilliste: spare parts list

**ATEX CU Adapter**

pos. item	Menge quantity	Beschreibung description	Material	ATEX CU M-Adapter		ATEX CU S-Adapter		ATEX CU T-Adapter		ATEX CU Tmax-Adapter		IEEx CU ex ia D4-Adapter	
				WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.	WS-Nr. ref.-no.		
15	5	Schraube M5x25 DIN EN ISO 4762 cap screw M5x25 DIN EN ISO 4762	A2-50										
16	1	O-Ring 21,95 x 1,78	NBR										
17	1	ATEX CU T - Adapter Oberteil ATEX CU T - adapter upper part	1.4301										
18	1	Führungsband PTFE driving band	Turcite										
19	1	ATEX CU T - Kolbenstangenverlängerung ATEX CU T - piston rod extension	1.4301										
20	1	O-Ring 11 x 3	NBR										
21	1	V - Dichtung V - seal	NBR										
22	1	ATEX CU Tmax - Kolbenstangenverlängerung ATEX CU Tmax - piston rod extension	1.4301										
23	1	ATEX CU Tmax - Zugstangenverlängerung ATEX CU Tmax - tie rod extension	PA6										
24	1	D4 ATEX Zugstangen verlängerung D4 ATEX tie rod extension	PA6 Black										
25	4	Sechskantschraube M8x25 Hexagon Screw M8x25	1.4301										
26	1	ATEX CU D4 - Adapter ATEX CU D4 - adapter	PEHD 100 antistatic black										
27	1	O-ring 70x2 O-ring 70x2	NBR										
28	1	Prox switch holder SW4 11 DIA + M12x1 Prox switch holder SW4 11 DIA + M12x1	PA12 black										
29	1	Schaltnocke D4 oben cam D4 top	1.4523 / 444FR										

**APV**  
SPX FLOW  
Germany

Datum: 09/14  
Name: Spliethoff  
Geprüft: Trytko

Datum: 13.04.15  
Name: Trytko  
Geprüft: Trytko

Datum: 18.06.21  
Name: C. Keil  
Geprüft: C. Keil

Blatt 3 von 3  
**RN ATEX 01.044.7**

# SPXFLOW®

APV Control Unit

IECEX CU ex ia



FOR SPECIFIC IECEX APPLICATIONS

## SPX FLOW

### Design Center

Gottlieb-Daimler-Straße 13  
D-59439 Holzwickede, Germany  
P: (+49) (0) 2301-9186-0  
F: (+49) (0) 2301-9186-300

## SPX FLOW

### Production

Stanisława Jana Rolbieskiego 2  
PL - 85-862 Bydgoszcz, Poland  
P: (+48) 52 566 76 00  
F: (+48) 52 525 99 09

SPX FLOW reserves the right to incorporate the latest design and material changes without notice or obligation.

Design features, materials of construction and dimensional data, as described in this manual, are provided for your information only and should not be relied upon unless confirmed in writing. Please contact your local sales representative for product availability in your region.

For more information visit [www.spxflow.com](http://www.spxflow.com).

ISSUED 06/2021 - Original Manual

COPYRIGHT ©2021 SPX FLOW, Inc.